

spin 360[™] child restraint

- Instruction Manual
- 🖟 사용설명서



ECE R44.04: A,C,D ECE R44.04: ISOFIX ECE R44.04: Group 0+/1(0-18kg)



GB Welcome to Joie™

Congratulations on becoming part of the Joie family! We are so excited to be part of your journey with your little one. While traveling with the Joie spin 360™ child restraint you are using a high quality, fully certified safety Group 0+/1 child restraint. Please carefully read this manual and follow each step to ensure a comfortable ride and best protection for your child.

If vehicle is equipped with ISOFIX, the vehicle lower anchor points may be visible at the vehicle seat crease. See your vehicle owner's manual for exact locations, anchor identification, and requirements for use.

To use this child restraint with the ISOFIX connections according to the UN ECE R44.04 Regulation, the child shouldweigh under 18kg (approximately 4 years old or under).

Base

Please read all the instructions in this manual before installing and using the product.

! IMPORTANT: KEEP FOR FUTURE REFERENCE.
PLEASE READ CAREFULLY.


Please keep the instruction manual in the storage compartment at the bottom of the base as right figure.



Parts List

Please make sure there are no missing parts. Please contact the retailer if anything is missing.

Fig. 1.1	Head Support	Fig. 1.9	Rotating Button
Fig. 1.2	Seat Pad	Fig. 1.10	Shoulder Strap
Fig. 1.3	Buckle	Fig. 1.11	Infant Insert
Fig. 1.4	Adjustment Webbing	Fig. 1.12	Head Support
Fig. 1.5	Recline Adjustment		Adjustment Lever
	Button	Fig. 1.13	ISOFIX Connector
Fig. 1.6	Load Leg	Fig. 1.14	ISOFIX Adjuster
Fig. 1.7	Load Leg Indicator		Button
Fig. 1.8	Load Leg Adjustment	Fig. 1.15	ISOFIX Guides
	Button	Fig. 1.16	Canopy

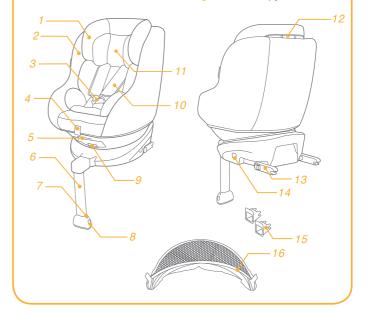

WARNING

- NO child restraint can guarantee full protection from injury in an accident. However, proper use of this child restraint will reduce the risk of serious injury or death to your child.
- The child should weight under 18kg (approximately 4 years old or under).
- ! DO NOT allow child restraint straps to become twisted, keep them flat.
- DO NOT use forward facing mode before the child's weight exceeds 9kg. Keep your child rearward facing as long as possible as rearward facing is the safest position.
- DO NOT install or use this child restraint without following the instructions and warnings in this manual or you may put your child at serious risk of injury or death.
- DO NOT make any modifications to this child restraint or use it along with component parts from other manufacturers.

WARNING

- DO NOT use this child restraint if it is damaged or has missing parts.
- DO NOT have your child in swaddled clothes when using this child restraint in rear facing or forward facing mode, because this may prevent your child from being properly and securely fastened by the shoulder harnesses and the harnesses between thighs.
- When using this child restraint in rear facing or forward facing mode, the harness must be used correctly, and make sure the lap belt is not above the child's pelvis portion.
- DO NOT leave this child restraint unsecured in your vehicle because an unsecured child restraint can be thrown around and may injure occupants in a sharp turn, sudden stop, or collision. Remove it if not in regular use.
- NEVER leave your child unattended with this child restraint.

WARNING

- NEVER install this child restraint on any vehicle seat equipped with safety airbags when used in rear facing mode.
- NEVER use a second-hand child restraint or a child restraint whose history you do not know because they may have structural damage that endangers your child's safety.
- Please keep this child restraint away from sunlight, otherwise it may be too hot for the child's skin.
- DO NOT use this child restraint as a regular chair as it tends to fall down and could injure the child.
- DO NOT use this child restraint without the soft goods.
- In the soft goods should not be replaced with any besides the ones recommended by the manufacturer, because the soft goods constitute an integral part of the child restraint performance.
- DO NOT put anything other than the recommended soft goods in this child restraint.

WARNING

- DO NOT put unsecured items in the vehicle because they can be thrown around and may injure occupants in a sharp turn, sudden stop, or collision.
- Do not place other items on top of the child restraint if it is in the car boot to prevent damage.
- Do not allow the child restraint harness or buckles to become trapped or caught in the vehicle seat or door.
- DO NOT continue to use this child restraint after it has suffered any violent crash. Replace immediately as there may be invisible structural damage from the crash.
- Remove this child restraint from the vehicle seat when it is not in use for a long period of time.
- To avoid suffocation, remove plastic bag and packaging materials before using this product. The plastic bag and packaging materials should then be kept away from babies and children.
- Consult the retailer for issues concerning maintenance, repair and part replacement.

WARNING

- Do not place any objects in the load leg area in front of your base.
- DO NOT carry this child restraint with a child in it.
- Frequently check the ISOFIX guides for dirt and clean them if necessary. Reliability can be effected by ingress of dirt, dust, food particles etc.
- DO NOT use any load bearing contact points other than those described in the instructions and marked on the child restraint.
- Correct Installation is only permitted by use of the ISOFIX connectors.
- DO NOT install this child restraint under the following conditions:
- 1. Vehicle seats with lap belt or 3-point-belt.
- 2. Vehicle seats facing sideways or rearward with respect to the running direction of the vehicle.
- 3. Vehicle seats movable during installation.

Emergency

In case of emergency or accidents, it is most important to have your child taken care of with first aid and medical treatment immediately.

Product Information

- 1. According to the UN ECE R44.04 Regulation, the child restraint with Base is a Semi-Universal ISOFIX Class A,C,D Child Restraint.
- Please refer to the Vehicle Fitting Information at the back of this manual. It is approved to European Regulation No. 44, 04 series of amendments, for general use in vehicles and it will fit most, but not all, car seats.
- 3. If in doubt, please consult the child restraint manufacturer or the retailer.

For Installation with ISOFIX System

This is an ISOFIX CHILD RESTRAINT SYSTEM. It is approved to UN ECE regulation 44, 04 series of amendments for general use in vehicles fitted with ISOFIX anchorages systems.

It will fit vehicles with positions approved as ISOFIX positions (as detailed in the vehicle handbook), depending on the category of the child restraint and of the fixture. If in doubt, consult either the infant child restraint manufacturer or vehicle manufacturer.

The ISOFIX size class for which this device is intended is A,C,D.


Suitable for Child weighing under 18kg

Mass Group 0+/1

Materials Plastics, metal, fabrics
Patent No. Patents pending

Concerns on Installation

see images 10 - 22

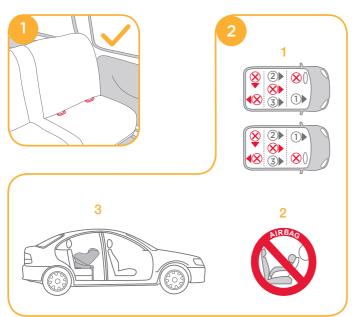

Choose the Installation Mode

ECE R44.04	Child's Weight	Installation Mode	Installation	Reference Age	Recline Position
	<18kg	Rear facing mode		Approx birth to 4 years	Position 1-5
	9-18kg	Forward facing mode		Approx 1 year to 4 years	Position 1-5

Installing the Base


see images 3 - 12

! After placing the base on the vehicle seat, pull the load leg downward to floor.




! Insert ISOFIX guides to assist with installation. 4 -1

- ! There are 10 adjustable positions for ISOFIX. Press the ISOFIX adjuster button to extend the ISOFIX. 6
- ! Make sure that both ISOFIX connectors are securely attached to their ISOFIX anchor points. The colors of the indicators on both ISOFIX connectors should be completely green. 6 -1
- ! If a tighter install or increased cabin space is required, then press the ISOFIX adjuster button 3 -1 and push to adjust. 5

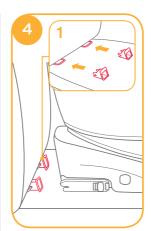



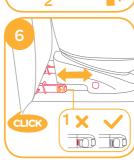

- ! After attaching the ISOFIX, pull the load leg downward to floor. When the load leg indicator shows green, the load leg is installed correctly.
- Squeeze the load leg releasing button, then adjust the load leg length. 7







- ! The ISOFIX connectors must be attached and locked onto the ISOFIX anchor points. 9 -1
- ! The load leg must be installed correctly with green indicator. 9 -2

Please refer to rear facing mode and recline positions mode in section to use the child restraint.









Removing the base


To remove from the vehicle press the ISOFIX adjuster button 10 -1 and pull the base back from the seat. 10 -2

Then press and release the connectors from the vehicle's ISOFIX. 10

To prevent damage during transit, press the ISOFIX adjuster button 2 -1 and fold the connector completely. 2 -2







Please recheck the load leg position after reclining.

There are 5 recline positions for rear facing mode and 5 recline positions for forward facing mode.



Height Adjustment for Head Support and Shoulder Harnesses

see images (5) - (18)

- 1. Please adjust the head support and check if the shoulder harnesses are at the correct height according to 15% (15)
- ! When used rear facing, the shoulder harness slots must be even with or just below the child's shoulders.
- ! When used forward facing, the shoulder harness slots must be even with or just above the child's shoulders. (6)





Recline Adjustment

see images 13 - 14

Squeeze the recline adjustment button (3), to adjust the child restraint to the proper position. The recline angles are shown as (4)



2. Squeeze the head support adjustment lever , meanwhile pull up or push down on the head support until it snaps into one of the 6 positions. The head support positions are shown as .





- Using in the Rear Facing Mode (Rearward Facing Mode/for Child under 18kg /infant 4 years old)
- see images 3 9
- ! Please install the child restraint on the rear vehicle seat, and then put the child in the child restraint.
- see images @ @
- Press the ISOFIX adjuster button
 -1 and pull the base back from the vehicle seat.



 Press the rotating button to rotate for easier side loading/unloading of the child, then rotate back to desired direction.

3. If a tighter install or increased cabin space is required, then press the ISOFIX adjuster button 3-1 and push to adjust. 3-2


- ! The ISOFIX connectors must be attached and locked onto the ISOFIX anchor points. 20 -1
- ! The load leg must be installed correctly with green indicator. 2 -2

Securing Child

After the child is placed into the seat, check whether the Shoulder Harness Straps are at proper height.

 Press the webbing adjustment button, while pulling out the shoulder harnesses to the proper length.









2. Unlock the buckle of the harnesses by pressing the red button.


 Fix the buckles on the both sides of seat to make placing the child in rear facing mode more convenient.

4. Use Infant insert is for children's protection. 69








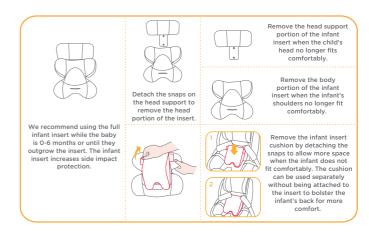

- Place the child into the child restraint and pass both arms through the harnesses.
- ! After the child is seated, recheck whether the shoulder harnesses are at the proper height.
- 6. Engage the buckle. Please refer to 29

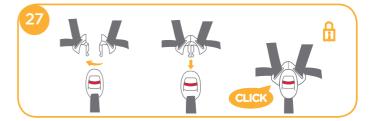

- 7. Pull down the adjustment webbing and adjust it to the proper length to make sure your child is properly secured.


 ©
- ! Make sure the space between the child and the Shoulder Harness Straps is about the thickness of one hand.
- 8. If steps 88.@3.@3 are taken when arriving at your destination whilst removing the child, then the harness will be positioned so that it is out of the way and ready for loading upon your return to the vehicle.



see images 29 - 39

 Press the ISOFIX adjuster button
 -1 and pull the base back from the vehicle seat.
 -2

2. Press the rotating button to rotate for easier side loading/unloading of the child, then rotate forwards to desired direction. (2)&(2)

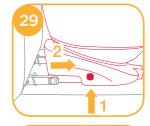







Using in the Forward Facing Mode (Forward Facing Mode/for Child between 9-18kg / 1 -4 years old)

see images 3 - 9

! Please install the child restraint on the vehicle seat, and then put the child in the child restraint. 3. If a tighter install or increased cabin space is required, then press the ISOFIX adjuster button 3 -1 and push to adjust. 3 -2

- ! The ISOFIX connectors must be attached and locked onto the ISOFIX anchor points. 2 -1
- ! The load leg must be installed correctly with green indicator.
 2 -2

Securing Child

After the child is placed into the seat, check whether the Shoulder Harness Straps are at proper height.

- Press the webbing adjustment button, while pulling out the shoulder harnesses to the proper length. 69
- 2. Unlock the buckle of the harnesses by pressing the red button.

- Fix the buckles on the both sides
 of seat to make placing the child in
 forward facing mode more
 convenient.
- When installing the child restraint in the forward facing mode, do not use the infant insert.
- Place the child into the child restraint and pass both arms through the harnesses. Engage the buckle.







- ! After the child is seated, recheck whether the shoulder harnesses are at the proper height.
- Pull down the adjustment webbing and adjust it to the proper length to make sure your child is properly secured.
- ! Make sure the space between the child and the Shoulder Harness Straps is about the thickness of one hand.
- 7. If steps 88.88 are taken when arriving at your destination whilst removing the child, then the harness will be positioned so that it is out of the way and ready for loading upon your return to the vehicle.



Use Canopy

see images 🛛 - 🐠









Detach Soft Goods

see images 40 - 49

Press the red button to disengage the buckle. 49

Follow steps @ - 49 to detach soft goods.

To re-attach the soft goods please repeat the above steps in the reverse step.

















Care and Maintenance

- ! After removing the wedge from the insert, please store it somewhere that the child cannot access it.
- ! Please wash the seat cover and inner padding with cold water under 30°C.
- ! Do not iron the soft goods.
- ! Do not bleach or dry clean the soft goods.
- ! Do not use undiluted detergents, gasoline or other organic solvent to wash the child restraint or base. It may cause damage to the child restraint.
- ! Do not wring out the seat cover and inner padding to dry. It may leave the seat cover and inner padding with wrinkles.
- ! Please hang dry the seat cover and inner padding in the shade.
- ! Please remove the child restraint and base from the vehicle seat if not in use for a long period of time. Put the child restraint in a cool, dry place where your child cannot access it.
- ! Do not tamper with the harness connectors during cleaning.



NOTE



조이 제품을 구매해 주셔서 감사합니다

조이의 가족이 되신 것을 축하 드립니다! 당신과 당신의 귀여운 아이가 함께하는 여행에 조이도 동참 할 수 있게 되어 매우 영광입니다. 조이 spin 360 은 고품질 자재를 사용하며 유럽/ 한국 안전 인증을 획득한 유아용 어린이 카시트입니다. 이 사용설명서를 잘 읽고 단계별에 따라 아이에게 최상의 안전과 편안함을 제 공하여 주시기 바랍니다.

lsofix 가 장착된 차량에 설치 가능하며, 자동차 매뉴얼을 참고하시어 앵커의 정확한 위치 및 사용전 주의사항을 확인해 주시기 바랍니다. 유럽 ECE R44.04 규정에 따라 lso-fix 를 장착하여 카시트를 사용시, 아이 몸무게 18kg 이하가 적당합니다.

베이스

제품을 설치하시기 전에 사용 설명서상의 내용을 숙지하시기 바랍니다.

중요! 추후 사용을 위해 사용 설명서를 잘 보관해 주시고, 설명서를 충분히 숙지해 주시기 바랍니다.

오른쪽 그림과 같이, 베이스 하단에 위치한 수납공간에 사용 설명서를 보관하여 주시기 바랍니다.




부품리스트

부품을 확인해주시고, 없는 부품이 있다면 에이원 고객센타로 연락해주시기 바랍니다. (에이원 고객센터 02-1800-8561)

- 11 헤드레스트
- 1.2 시트 패드
- 13 버클
- 1.4 카시트 어깨 벨트 길이 조절
- 1.5 등받이 각도 조절 버튼
- 1.6 서포팅래그
- 1.7 서포팅래그 인디케이터
- 1.8 서포팅래그 길이조절버튼
- 1.9 시트 회전 버튼

- 1.10 어깨벨트
- 1.11 신생아 이너시트
- 1.12 헤드레스트 높낮이 조절 레버
- 1.13 아이소픽스 커넥터
- 1.14 아이소픽스 조절 버튼
- 1.15 아이소픽스 가이드
- 1.16 차양막

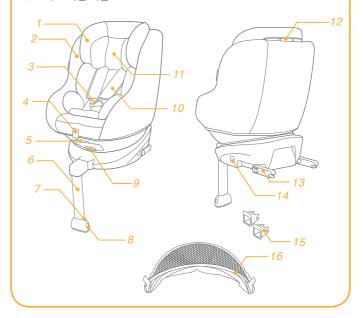

경고

- 카시트가 사고로부터 완벽하게 아이를 보호한다고는 할 수 없습니다. 그러나, 올바른 카시트장착이 사망이나 심각한 부 상의 위험을 줄일 수 있습니다.
- ┖ 아이 몸무게 18kgs(약 4세)이하까지 사용 가능합니다.
- . 안전벨트가 꼬이지 않도록 주의하여 주시기 바랍니다.
- 9kg 미만의 아이는 전방 장착으로 사용하실 수 없습니다. 되 도록이면 오랫동안 더욱 안전한 후방 장착 모드로 사용하시 길 권장합니다.
- 사용설명서의 지시사항을 따르지 않고 카시트를 설치 시, 아기가 심각한 부상의 위험이나 사망에 이를 수 있습니다.
- 다른 제조사로부터 제공된 부품을 사용하시거나, 임의로 카 시트를 보완하지 마시길 바랍니다.

경고

- 부품이 없어지거나 손상되었을 시, 카시트사용을 중단하시 길 바랍니다.
- 아기를 포대기등으로 감싼채 카시트를 사용하지 마시길 바랍니다. 어깨벨트 및 가랑이 벨트의 올바르지 못한 고정으로 아기를 잘 보호할 수 없기 때문입니다.
- 카시트 사용시, 안전벨트가 올바르게 착용되어야하며, 아이 골반 위로 허리 벨트가 올라오지 않도록 주의하시기 바랍니다.
- 카시트를 고정하지 않고 차량에 두지 마십시오. 카시트가 움직일 수 있어, 탑승자가 다칠 수 있습니다. 정기적으로 사 용하지 않을 시, 카시트를 차량에서 제거하여 주시길 바랍 니다.
- 아이는 반드시 올바르게 장착된 카시트에 탑승되어야합니다.

경고

- 절대로 에어백이 있는 좌석에 후방장착으로 카시트를 설치 해서는 안됩니다.
- 사용한 이력을 알 수 없는 중고 카시트를 사용하셔서는 안 됩니다. 만약에 중고 제품에 문제가 있다면 아이가 안전할 수 없습니다.
- 아이의 피부가 화상을 입을 수 있으니, 카시트를 직사광선 으로부터 멀리하시길 바랍니다.
- . 전복되어 아이가 다칠 수 있으니 카시트를 일반 의자로 사용하셔서는 안됩니다.
- 시트 커버 없이 카시트를 사용하지 마시길 바랍니다.
- . 제조사가 추천하지 않은 봉제물을 교체하여 사용하지 마시 길 바랍니다. 봉제물은 어린이안전장치 성능에 있어서의 또 하나의 중요한 구성품 입니다.
- 카시트에 제조사가 제공하거나 추천하지 않은 악세서리를 사용하지 마시길 바랍니다.

경고

- 차량내에 고정되지 않는 물건을 놓아서는 안됩니다. 급회 전, 급정거 그리고 충돌로 인해서 아이가 부상을 입을 수 있 습니다.
- 카시트 상단에 물건을 올려 놓아서는 안됩니다.
- ♪ 카시트 안전벨트가 꼬이거나 차량 문에 끼지 않도록 주의하 시길 바랍니다.
- 사고가 있는 경우 카시트 사용을 중단하여 주시길 바랍니다. 보이지 않는 내부 손상이 있을 수 있으니 즉시 점검을 받아시길 바랍니다.
- 장기간 사용하지 않을 시, 카시트를 차량에서 제거하여 주 시길 바랍니다.
- 질식사고를 예방하기 위해, 사용전 포장재와 비닐을 제거 후, 아이가 닿지 않는 곳에서 보관하여 주시길 바랍니다.
- ! 카시트 점검, 수리, 부품 교체에 대해서는 조이의 정식 한국 디스트리뷰터인 에이원 고객센타로 연락 주시길 바랍니다. (Tel: 1800-8561)

경고

- 카시트 하단 로그레그 주변에 물건을 놓아서는 안됩니다.
- 이이를 태운 상태로 카시트를 운반 하셔서는 안됩니다.
- 아이소픽스 가이드에 오염이 있는지 수시로 확인하여 주시 길 바랍니다. 카시트가 오염,먼지, 음식물 부스러기등의 침 투에 의해 영향 받을 수 있습니다.
- ♪ 카시트의 아이소픽스 부분은 사용 설명서나 카시트에 표시되어있는 부분 외에 사용하셔서는 안됩니다.
- 아이소픽스커넥터를 사용하여 올바르게 설치하여 주시길 바랍니다.
- 아래와 같은 차량 시트 조건에서는 카시트를 설치하셔서는 안됩니다.
 - 1. 허리벨트 또는 2점식 안전벨트만 사용하는 차량용 시트
 - 2. 차량의 주행 방향 관점에서 옆쪽이나 뒷면을 바라보는 차량용 시트
 - 3. 설치하는 동안에 움직임이 있는 차량용 시트

긴급사항

사고나 긴급한 상황인 경우, 즉시 아이를 보호하고 치료하는 것이 무엇보다 중요합니다.

제품 정보

- 1. 유럽 ECE R44.04 규정에 따라 준범용 아이소픽스 클래스 A.C.D 어린이 용 보호장치입니다
- 2. 매뉴얼 뒷면에 기입된 차량 피팅 정보를 참고하시기 바랍니다. 유럽 기준 No.44.04와 한국 KC 기준으로 승인 받았습니다. 단, 모든 자동차와 호환되는 것은 아닙니다.
- 3. 호환성 관련하여 의문 사항은 자동차 제조사나 판매 업체에 문의하시기 바랍니다.

아이소픽스 설치

본제품은 아이소픽스 어린이 보호장치 입니다. 유럽 ECE R44.04 기준으로 승인 받았으며, 아이소픽스 앵커가 설치된 차량에 일반적으로 사용 가능합 니다

차량 매뉴얼에 기재된 아이소픽스 부착으로 승인된 곳에 장착 가능합니다. 관련 의문 사항은, 카시트 판매 업체나 자동차 제조업체에 문의하시기 바랍니다.

본 장치는 아이소픽스 사이즈 클레스 A C D 입니다


사용 무게: 신생아 부터 아이 체중 18kgs이하

구분: Group 0+/1

자재: 플라스틱, 금속, 원단

설치시 고려 사항

아래 그림 🛈 - 2

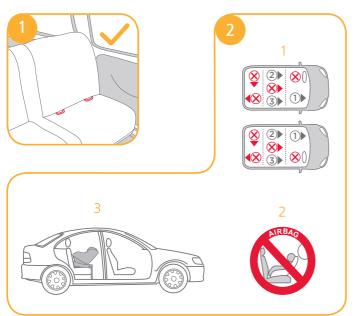

설치모드 선택

	아이 체중	장착모드	장착 이미지	권장 연령	등받이 각도조절
ECE R44.04	<18kg	후방 장착 모드		신생아~ 약 4세	1-5 단계
	9-18 kg	전방 장착 <u>모드</u>		약 1세~ 약 4세	1-5 단계

베이스 설치


아래 그림 3 - 12

! 차량에 카시트 베이스를 설치 후, 레그 가 아래(바닥)쪽을 향하도록 당겨 주시 기 바랍니다.




설치를 돕기 위해 아이소픽스 가이드를 차량 앵커에 부착하시기 바랍니다.


- ! 아이소픽스는 10단계로 길이 조절 가능합니다. 아이소픽스 조절 버튼(1)을눌러서 아이소픽스 길이를 확장시켜주시기 바랍니다.
- ! 반드시 양쪽의 아이소픽스 앵커 포인 트가 아이소픽스 커넥터에 바르게 연 결될 수 있도록 해주시길 바랍니다. 양 쪽 ISOFIX 인디케이터의 색상이 반드 시 초록색으로 바뀌어야 합니다 **6**-1
- ! 아이소픽스 조절버튼 (5 -1을 누르며, 아이소픽스 커넥터 간격을 조정해주시 길 바랍니다 (6

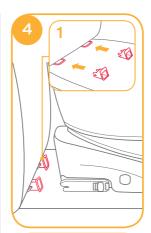




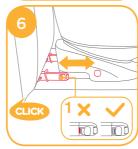

 ! 아이소픽스를 차량에 장착한 후, 서포 팅 레그 를 바닥까지 확장시켜 주시기 바랍니다. 서포팅 레그가 올바르게 장 착 되었을 때 인디케이터의 색이 초록 색으로 변합니다. 인디케이터의 색상 이 빨간색일 때에는 장착이 올바르지 않다는 뜻입니다.



- ! 차량바닥에 서포팅 레그 완전히 밀착 되었는지 확인하십시오.
- ! 서포팅 레그 길이를 짧게 하기 위해서 는 서포팅 레그 해제 버튼을 누르신 후, 위쪽으로 당겨주시길 바랍니다.



- 아이소픽스 커넥터는 아이소픽스 앵커 와 완전히 결합 및 고정되어야합니다.
 -1
- ! 서포팅 레그가 초록색을 나타내어 올 바르게 장착되어야합니다. ᠑ -2

올바른 카시트 사용을 위하여 설명서 상 에 후방 장착과 등받이 각도 조절에 대한 내용을 확인하시기 바랍니다.









아이소픽스 카시트 베이스 분리


아이소픽스 조절 버튼을 누른채 (0 -1 베이스를 당겨 주시기 바랍니다.

아이소픽스 커넥터 버튼을 누르며 (1) -1 & (1) -2 차량으로부터 아이소픽스커넥터 를 분리하시기 바랍니다.

카시트를 운반해야 할 경우는 손상을 예방 하기 위해, 아이소픽스 조절 버튼을 눌러 ② -1 아이소픽스 커넥터를 안으로 넣어주 시길 바랍니다 ② -2.







등받이 각도 조절 후 서포팅 레그의 위 치를 재확인하시기 바랍니다.

전.후방 장착 시, 각 5단계씩 등받이 각 도 조절 가능합니다.



헤드레스트 및 어깨벨트 높이 조절 아래그림 15-18 참고

- 1. 헤드레스트의 높이 조절 후, 어깨 벨 트가 올바른 위치에 있는지 확인하시 길 바랍니다. (1) & (10)
- ! 후방 장착시, 아이의 어깨와 어깨벨
 트 높이가 일직선상에 위치 혹은 어깨벨트 슬롯이 어깨 아래에 위치되어 야 합니다.
- 전방 장착시, 아이의 어깨와 어깨벨 트 높이가 일직선상에 위치 혹은 어 깨벨트 슬롯이 어깨 위에 위치되어야 합니다.





38

등받이 각도 조절

아래 그림 🔞 - 🚯

37

등받이 조절 버튼 ③ 을 눌러 원하는 위 치에 고정하시길 바랍니다. 등받이는 그 림 ④ 와 같이 조정 가능합니다.



2. 헤드레스트는 6단계로 높낮이 조절 이 가능합니다. 헤드레스트 높낮이 조절 레버를 꽉 누르시며 ① 원하는 위치에 고정하시길 바랍니다. 헤드레 스트 는 그림 ③ 과 같이 상하로 조정 가능합니다.





후방 장착으로 사용하기

(몸무게 18kgs이하/약 4세까지 후방 장착 가능)

아래 그림 3 - 9

반드시 뒷좌석에 카시트를 장착하신 후,
 아이가 탑승되도록 하시길 바랍니다.

아래 그림 📵 - 🕸

1. 카시트 분리 시, 아이소픽스 조절 버튼을 누른 상태로, 카시트를 자동차 시트로 부터 당겨주시길 바랍니다. 19 -1



- 2. 회전버튼을 눌러 시트 방향을 옆쪽 혹은 앞쪽으로 조정하시면, 아이를 쉽게 카시트 에 앉히고 내리실 수 있 습니다. ◎8❷
- 3. 아이소픽스 조절버튼 4 -1을 누르 며, 아이소픽스 커넥터 간격을 조정 해주시길 바랍니다.
- ! 아이소픽스 커넥터는 앵커포인트에 장착되어, 확실히 고정되어야합니다.
 ❷ -1
- ! 카시트가 제대로 장착되었을 때, 인 디케이터에 초록색이 표시됩니다. ❷ -2

카시트 안전 벨트 착용 방법

아이를 카시트에 태운 후, 어깨벨트가 올바른 높이에 있는 지 확인하시기 바랍 니다.

1. 안전 벨트 조절을 위해 그림 23에 표 기된 시트 홀에 손가락을 넣어 조절 버튼을 눌러주시기 바랍니다. 동시에 어깨 벨트를 당겨 적당한 길이로 조 정하시기 바랍니다. ❷









2. 버클 분리를 위하여 빨간 버튼을 눌러 주시길 바랍니다. 4


3. 편하게 아이를 태울 수 있도록, 시트 양 옆에 안전 벨트 버클을 고정하여 주시기 바랍니다.∰

4. 아이 보호를 위해 신생아 이너시트를 사용해 주시길 바랍니다��








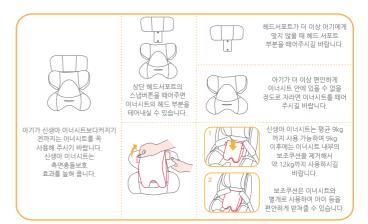

5. 카시트에 아이를 태운 후, 어깨벨트에 양팔을끼우시길 바랍니다.

6. 버클을 체결합니다. 아래 그림 (27)에 따라 버클을 체결하시기 바랍니다.

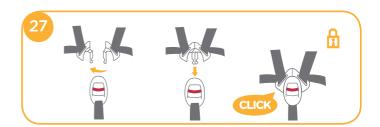

- 7. 안전벨트가 편안하게 아이를 감쌀수 있는 알맞은 길이까지 안전벨트 끈을 아래로 당겨 주시기 바랍니다. ³³
- 아이를 카시트에 태운 후, 어깨벨트 가 올바른 높이에있는 지 확인하시기 바랍니다.
- 8. 카시트에서 아이를 내리실 때는, 그 림 ઢ & ઢ & ઢ ી 에 따라 안전벨트와 버클을 해제하여 주시기 바랍니다.



- 2. 회전버튼을 눌러 시트 방향을 옆쪽으로 조정하시면, 아이를 쉽게 카시트에 앉히고 내리실 수 있습니다. 아이를 앉히신 후, 앞쪽으로 시트 회전하시길 바랍니다. 10 & 19
- 3. 아이소픽스 조절버튼 3 -1을 누르 며, 아이소픽스 커넥터 간격을 조정 해주시길 바랍니다 3 -2







전방 장착으로 사용하기

(몸무게 9kg~18kg/1세~4세까지 전방 장착 가능)

아래 그림 3 - 9

! 카시트를 장착한 후, 아이를 탑승시 키셔야 합니다.

아래 그림 29 - 36

1. 카시트 분리 시, 아이소픽스 조절 버 튼을 누른 채, 카시트를 자동차 시트 로부터 당깁니다. ❷ -1



- 아이소픽스 커넥터는 앵커포인트에 장착되어, 확실히 고정되어야합니다.
- ! 카시트가 제대로 장착되었을 때, 인 디케이터에 초록색이 표시됩니다.
 ☑ -2

카시트 안전 벨트 착용 방법

아이를 카시트에 태운 후, 어깨벨트가 올 바른 높이에 있는 지 확인하시기 바랍니 다.

- 1. 안전 벨트 조절을 위해 그림 33에 표기된 시트 홀에 손가락을 넣어 벨트 길이 조절 버튼을 눌러주시기 바랍니다. 동시에 어깨 벨트를 당겨 적당한 길이로 조정하시기 바랍니다. ③
- 2. 버클 분리를 위하여 빨간 버튼을 눌러 주시길 바랍니다. 44
- 3. 편하게 아이를 태울 수 있도록, 시트 양옆에 안전 벨트 버클을 고정하여 주 시기 바랍니다. ⁵⁵
- 4. 전방 장착으로 카시트를 사용하실 때, 신생아 이너시트는 사용하실 수 없습 니다.
- 5. 카시트에 아이를 태운 후, 양팔을 어깨 벨트에 통과시켜주시기 바랍니다. 버 클을 체결합니다.
- 아이를 카시트에 앉힌 후, 어깨 벨트가 올바른 높이에 있는지 재확인해 주시 기 바랍니다.







- 6. 안전벨트가 편안하게 아이를 감쌀수 있는 알맞은 길이까지 안전벨트 끈을 아래로 당겨 주시기 바랍니다. 🚳
- 아이 가슴과 어깨벨트 사이의 공간에 손바닥 하나가 들어갈 정도가 확보되 어야합니다.
- 7. 카시트로부터 아이를 내리실 때는, 그 림 ③ & ④ & ⑤ 에 따라 안전벨트와 버클을 해제하여 주시기 바랍니다.



차양막 사용

아래 그림 🖅 - 🐠









시트류 분리하기

아래 그림 40 - 48

빨간 버튼을 눌러 안전벨트를 해제하시기 바랍니다. 41

시트류(시트커버, 어깨벨트 커버) 분리는 아 래 그림 🛂 - 🚯 을 참고해주시기 바랍니다.

분리된 시트를 다시 씌울때, 반대로 진행하여 주시기 바랍니다.

















유지 및 보수

- ! 이너시트 쿠션을 제거 하신 후에는, 아이가 닿지 않는 곳에 보관하여 주시기 바랍니다.
- ! 30도 미만의 차가운 물에 시트류(커버 등) 세탁하여 주시기 바랍니다.
- ! 시트에 다리미를 사용하지 마시길 바랍니다.
- 표백이나 드라이 클리닝 하시지 마시길 바랍니다.
- ! 원액의 세제, 가솔린 또는 용해제를 사용하여 본 제품을 닦지 마시기 바랍니다. 제품에 손상을 가할 수 있습니다.
- ! 절대로 강한 힘을 가해 시트 패드와 커버의 물기를 제거하지 마십시오. 이로 인해 시트 패드와 커버에 주름이 생길 수 있습니다.
- 반드시 그늘에서 말려주시길 바랍니다.
- 오랜 기간동안 카시트를 사용하지 않으실 경우에는 자동차에서 분리하여 주십시오. 아이들의 손에 닿지 않는 서늘하고 시원한 곳에 제품을 보관하여 주시길 바랍니다
- ! 청소 중 벨트커넥터를 건드리지 마시길 바랍니다.



NOTE



Allison Baby UK Ltd, Venture Point, Towers Business Park Rugeley, Staffordshire, WS15 1UZ